


CANOE SETUP FOR ROWING SOLO OR WITH PASSENGER

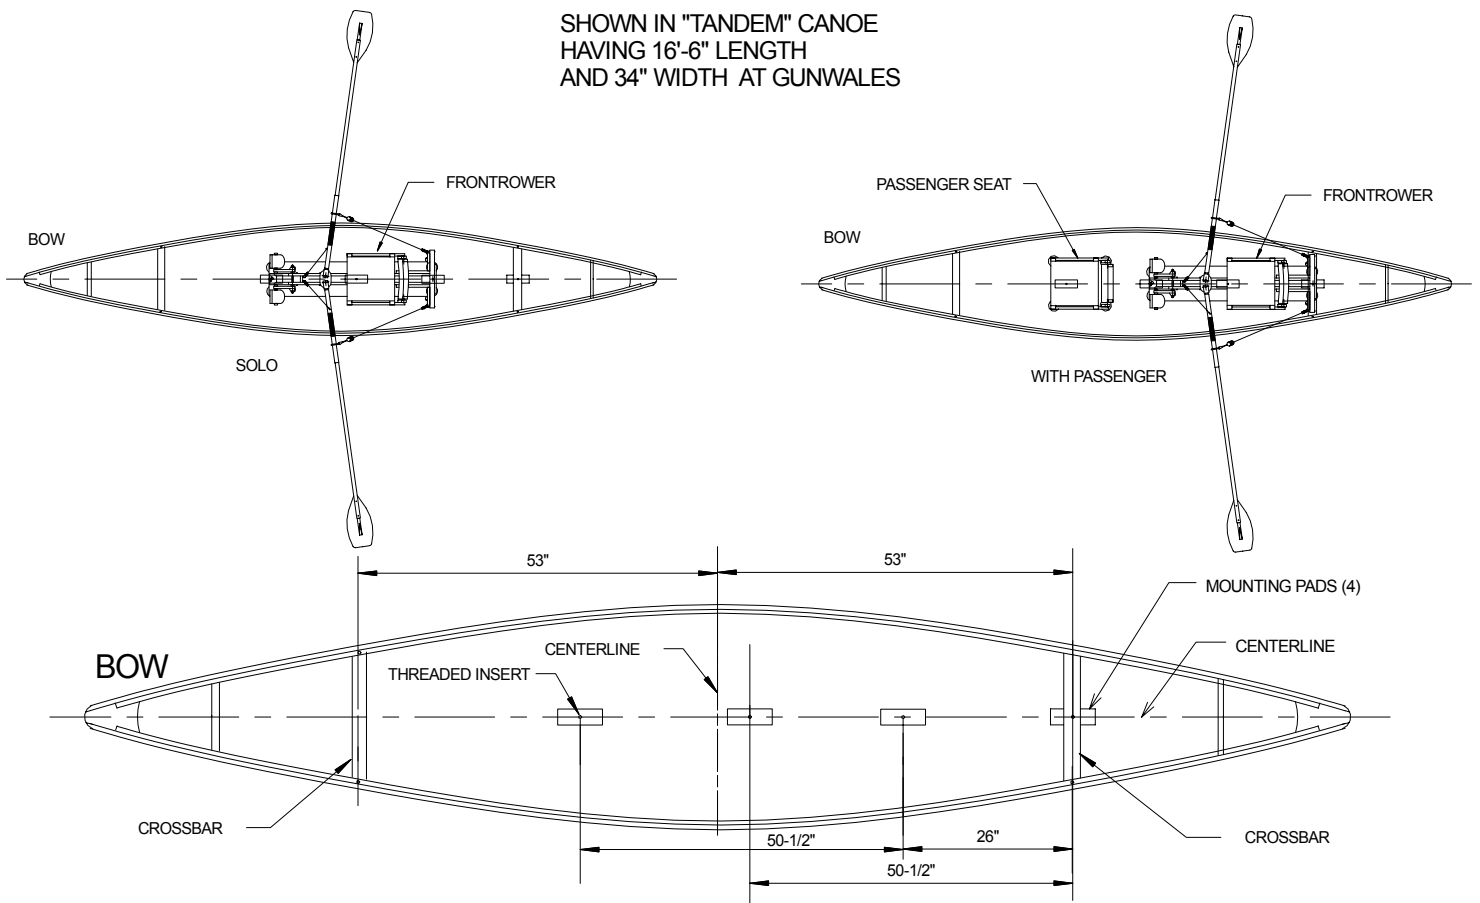

NOTES:

1. If ordering a new canoe, kevlar lay-up and wood gunwales are preferred. Have builder locate crossbars as shown. Request seats not installed (shipped loose). Have builder install FrontRower mounting pads (available from Ron Rantilla) in locations shown.
2. If setting up an existing canoe, remove existing crossbars and seat and install new crossbars in locations shown. Glue FrontRower mounting pads in locations shown using epoxy thickened with adhesive filler.
3. To locate centerline on canoe floor, clamp a board across the gunwales, find the centerline on the board and project down onto floor using a square.
4. Mounting pads are to be installed in pairs 50-1/2" between threaded insert centers.
5. Canoe shown has 21" inside clearance at rear crossbar location. Narrower canoes may not have this much room and will require a narrow cockpit option. Narrow cockpit option requires 17" minimum clearance.
6. Not all canoes are suitable for the FrontRower. See website (FrontRower.com) for guidelines.

Copyright 2011 Ron Rantilla Rowing Systems, Warren, RI 401-247-1482